FLÄCKFRI

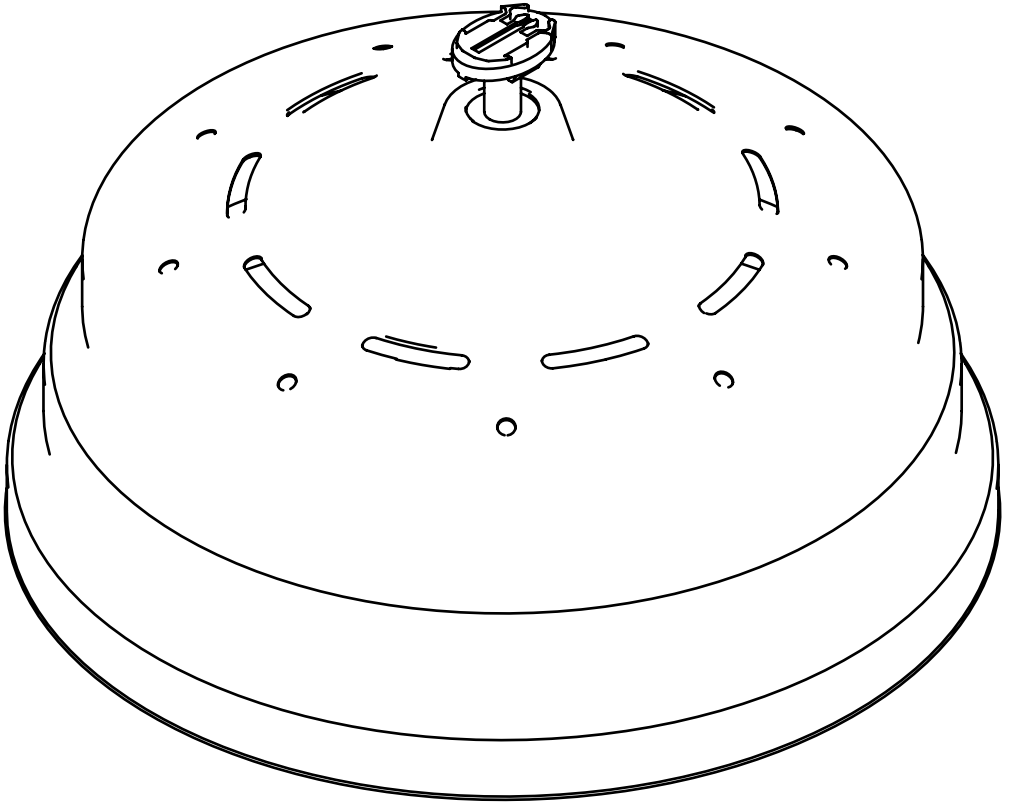

Design and Quality
IKEA of Sweden

ES

FICHA TÉCNICA DEL PRODUCTO

FUNCIÓN Evitar que el microondas se manche mientras se calienta el alimento. La tapa se mantiene fija en el interior gracias a un enganche al techo interior del horno, y se despliega hacia abajo al insertar el producto a calentar o cocinar. Fácil de plegar cuando no es necesario y de retirar cuando se ensucia. Sólo es necesario retirarlo para su limpieza.

MATERIAL Y FORMA La silicona de la tapa es un material transparente para las ondas y no altera al alimento en cuanto humedad y coloración. Contiene varios agujeros pequeños para soltar vapor.

COMPONENTES

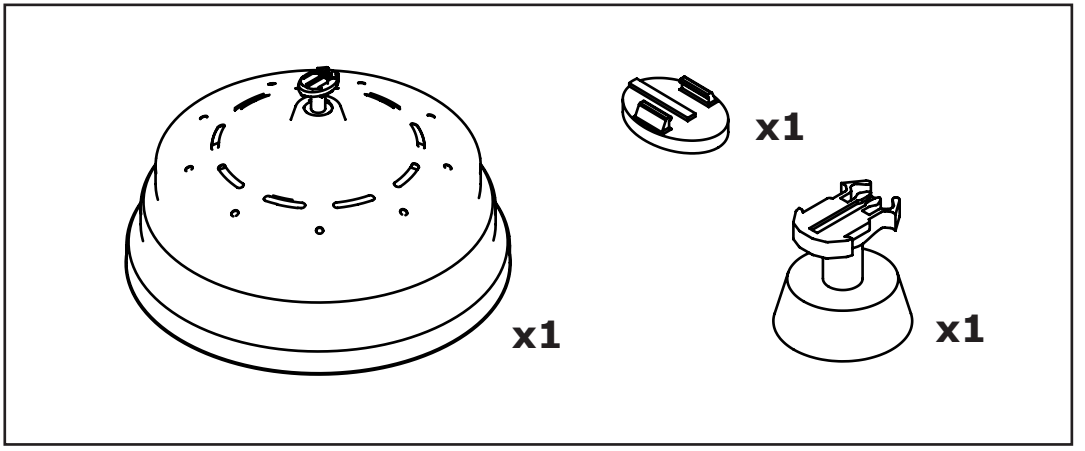

FUNCIONAMIENTO

1

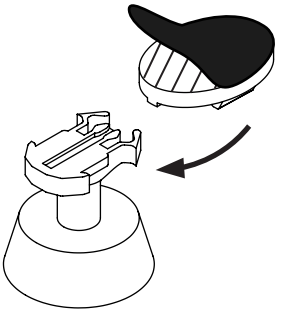

2

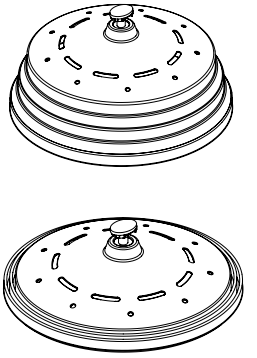

3

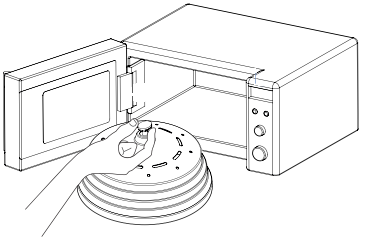

4

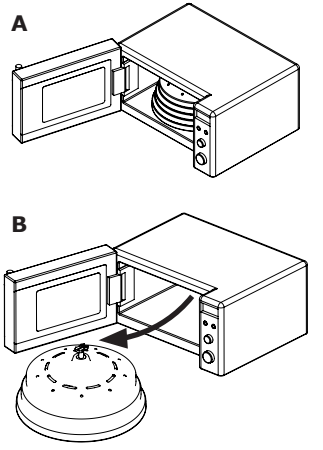

FICHA FUNCIONAL DEL PRODUCTO

INNOVACIÓN La tapa se mantiene fija en el microondas y el usuario sólo la despliega cuando la usa.

AHORRO DE ESPACIO Y TIEMPO La tapa permanece dentro del horno y no es necesario guardarla fuera del mismo, ya que se pliega cuando no se usa.

FUNCIONALIDAD Su característica forma permite que se pueda doblar cuando no se quiera usar. El clipaje se puede desmontar fácil y rápidamente para poder limpiar la tapa.

ALTA CALIDAD La silicona permite que las ondas del microondas transpasen el objeto, de manera que no obstaculiza el calentamiento.

MEDIDAS BÁSICAS

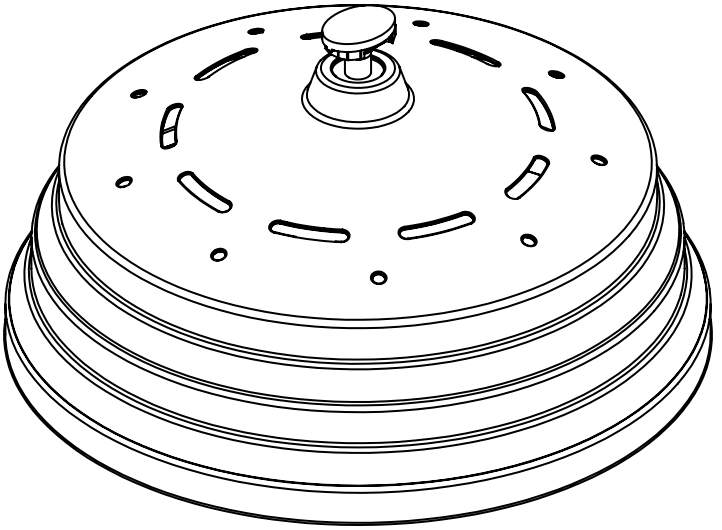

DIÁMETRO: 26 cm

ALTURA 16 cm

EN

PRODUCT DATA SHEET

FUNCTION The main goal is to prevent staining the microwave while the food is being heated. The lid stays fixed to the top of the inside of the oven, and can deploy downwards when heating or cooking. It can retract easily when not in use and only needs removing for cleaning.

MATERIAL AND SHAPE The silicone cover is a completely permable material for microwaves and it doesn't produce extra humidity. The colour does not affect the food. It has several small holes to release steam.

COMPONENTS

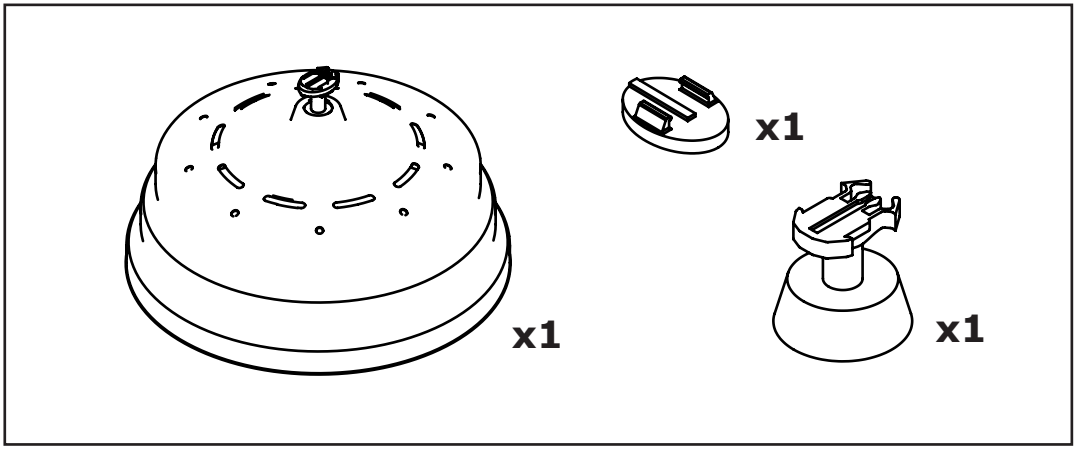

OPERATION

1

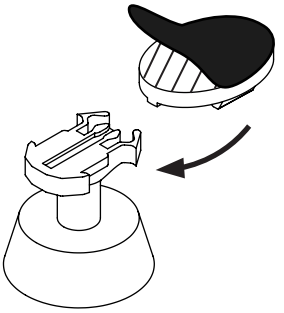

2

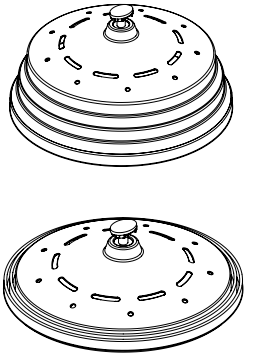

3

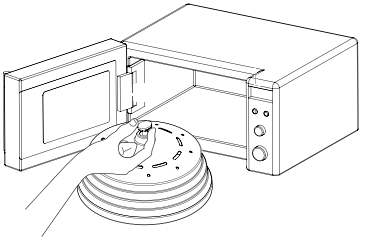

4

A

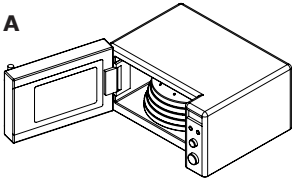

B

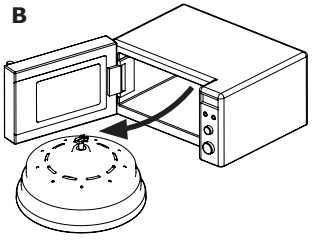

FUNCTIONAL FACT SHEET

INNOVATION The cover is fixed when inside the microwave and the user only deploys it when in use. No need to store it outside.

SAVES TIME AND SPACE It will prevent that the common microwave cover bothers you when you place food or when it takes up space when stored.

FUNCTIONALITY Its characteristic shape allows it to be folded when it’s not being used. It can be dismantled easily and quickly to clean the lid.

HIGH QUALITY Silicone allows waves to go through the surface, so it makes the heating possible.

BASIC DIMENSIONS

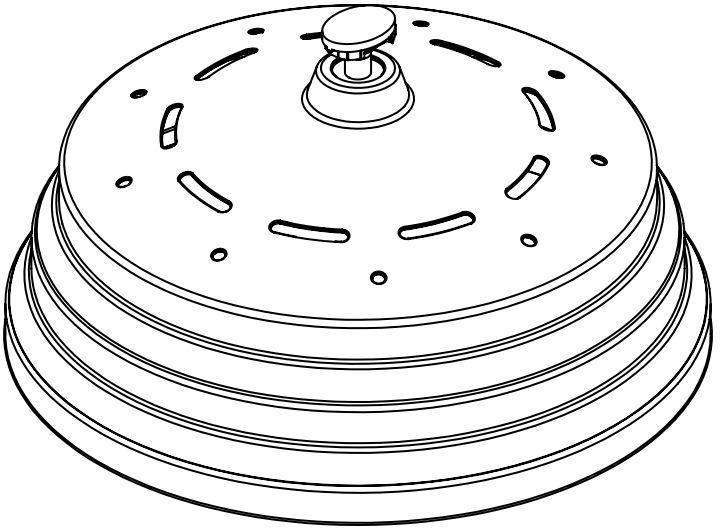

DIAMETER: 26 cm

HEIGHT: 16 cm

FIXED MICROWAVE LID

PAULA ALDEA | MARC FERRER

ORIOL LÓPEZ | PAU RUIZ

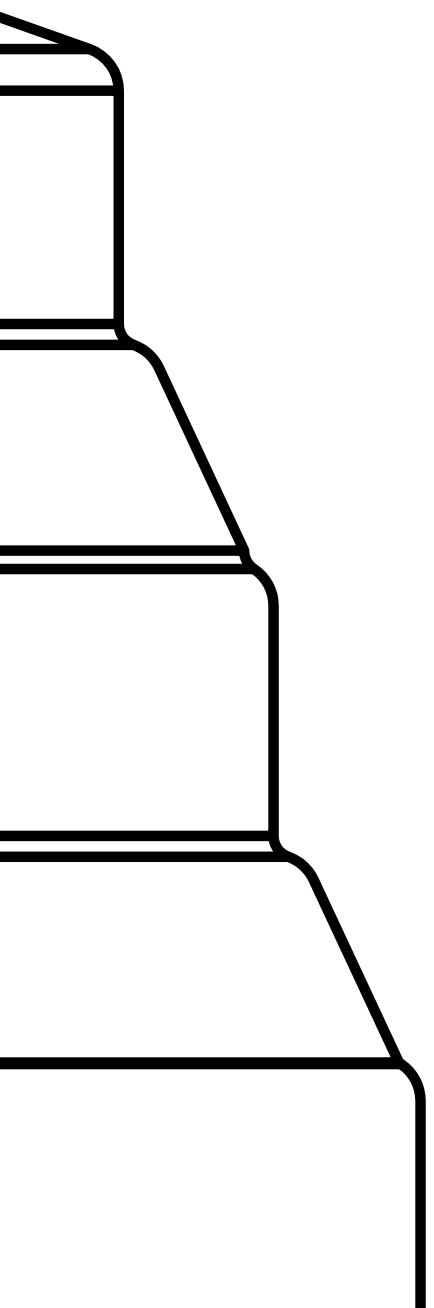

Design and Quality
IKEA of Sweden